LED STREET LIGHT INSTALLATION GUIDE



| Version | Nominal Wattage W | Fixture Dimension mm | Fixture Weight kg | Packing Type units /ctn | EPA m² |
|---------|----------------------|-------------------------|----------------------|----------------------------|-----------|
| Small | 30 /40 /50 | 420 x160 x76 | 2.0 (±0.1) | 1 | 0.080 |
| Medium | 60 /80 /100 | 450 x220 x74 | 2.6 (±0.1) | 1 | 0.119 |
| Large | 120 /150 | 530 x250 x81 | 3.8 (±0.1) | 1 | 0.159 |

 
| VOLTAGE | AC 100-240V /277V | | |
|--------------------------|--|--|--|
| PROTECTION CLASS | Class I (Default) / Class II | | |
| POWER FACTOR | >0.9 | | |
| OPERATING TEMP. | -40°C ~ +50°C | | |
| OPTICS | Type II, Type III | | |
| HOUSING | High pressure die-cast aluminum | | |
| HOUSING COLOR | Gray (Default) / Black (available on request) | | |
| MOUNTING | Side entry | | |
| IP RATING | IP66 | | |
| IK RATING | IK10 | | |
| Lifespan L70 at 25 °C | >100, 000 h | | |
| MAX MOUNTED HEIGHT | 15m | | |
| | | | |

 
WARRANTY 5 years

 
INSTALLATION & CONNECTION INSTRUCTIONS

 
STEP 1: Open the package and check the product. In case of any damage, contact us. STEP 2: Loosen the two screws on the bracket, but do not unscrew them all, as shown below 1. STEP 3: Connect the lamp with wire from pole (correspond L, N, GND lines), then insert lamp into the pole according to the arrow direction (can be used on 50-60mm poles), as shown below (2). STEP 4: Tighten the two screws of the bracket as shown below 3. STEP 5: The installation is completed as shown below 4. Recommended torque: 12Nm ± 1Nm (Version S/M); 17Nm ± 1Nm (Version L)


2









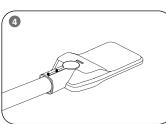

Vertical mounted with our adapter (Optional)

Allen Wrench*: 4mm (Version S/M) 5mm (Version L)

CAUTION

- Installation and maintenance must be performed by professionals only.
- Please ensure the pole is strong enough and the screws are tightened.
- The ground wire must be securely connected.
- Please make sure the lamp is working with correct input voltage.

- Cut off the power before maintenance.
- Do not use chemicals or corrosive cleaner to clean the fixture.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by qualified person in order to avoid a hazard.