LED FLOOD LIGHT INSTALLATION GUIDE

		Version		
		S		
		М		
		L		
VOLTS	AC 100-240V /277V 50 /60Hz	XL		
PROTECTION CLASS	Class I (Default) /Class II			
POWER FACTOR	>0.95	BRACKET MOUNTING & CONI STEP 1: Open the packaging and che		
OPERATING TEMP.	-40°C ~ +50°C	STEP 2: Adjust the flood light to direct STEP 3: Be sure to connect the cable		
BEAM ANGLE	25°,60°,90°,110° or Asymmetrical	STEP 4: Switch the voltage on and ch Maintenance: Toolless open clips of t		
HOUSING	High pressure die-cast aluminum Tempered glass	Recommended torque: 17Nm ± 1Nm Recommended torque: 6Nm ± 1Nm /		
HOUSING COLOR	Gray (Default) / Black (available on request)			
MOUNTING	Bracket mounted			
Mounting Location	Wall /Pole /Floor /Ceiling			
IP RATING	IP66			
IK RATING	IK10			
WARRANTY	5 years			

Version	Nominal Wattage W	Fixture Dimension mm	Fixture Weight kg	Packing Type units /ctn	EPA m²
S	30 /40 /50	345 x226 x81	2.3(±0.1)	1	0.094
М	60 /80 /100 /120	447 x321 x90	4.4(±0.1)	1	0.172
L	150 /180 /200 /240	495 x378 x90	6.0(±0.1)	1	0.225
XL	320 /400	639 x507 x92	12.0(±0.1)	1	0.389

NNECTION INSTRUCTIONS

neck the product. In case of any damage, contact us. ect the light in the desired direction before tightening the screws. e correctly. Brown-Live, Blue- Neutral, Yellow/Green- -Ground. check to see that the flood light works properly. the light body then replace the LED or Driver (Except Version XL). n (Version S /M /L) /29Nm ± 1Nm (Version XL)





CAUTION

- Installation and maintenance must be performed by professionals only.
- Please ensure the holder is strong enough and the screws are tightened.
- The ground wire must be securely connected.
- Please make sure the lamp is working with correct input voltage.

- Cut off the power before maintenance.
- Do not use chemicals or corrosive cleaner to clean the fixture.
- If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by qualfied person in order to avoid a hazard.